
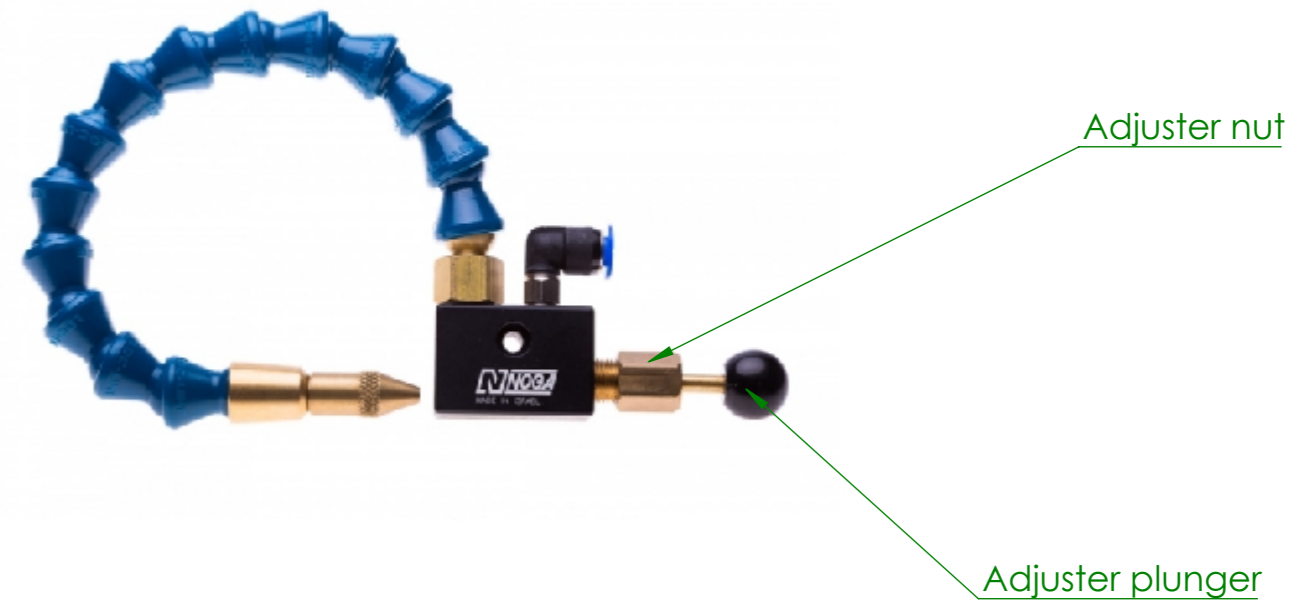


Atomising Spray Nozzles

6

"NOGA" atomising spray nozzles.
3 fitted to cutter block lid
1 fitted over the encoder wheel

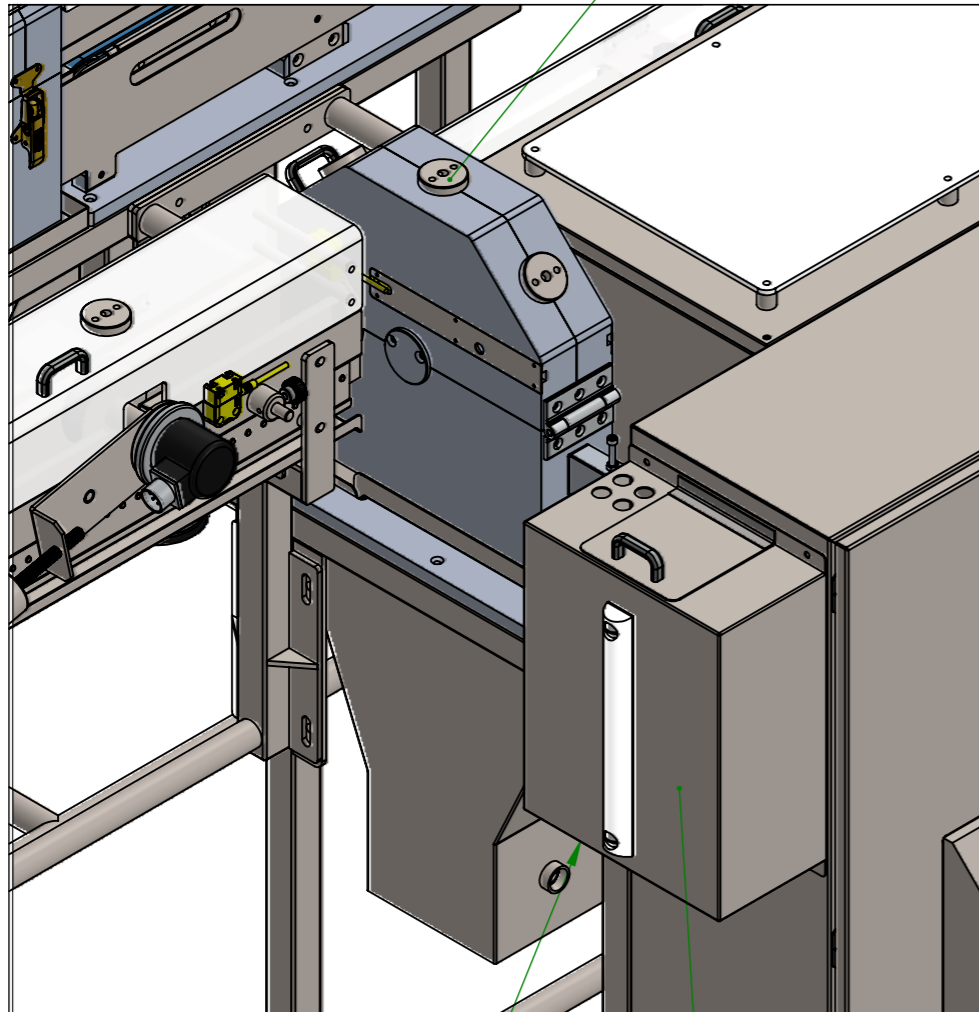

NOGA Spray nozzle operation.

All four atomiser are controlled by a solenoid valve and will only operate when the machine is running.

To adjust flow rate -
Push plunger adjuster in to reduce/stop flow
Pull plunger adjuster out to increase flow.
Use adjuster nut to set a flow limit

Tap on base to drain the tank if required.

Fill tank with lubricant. Do not fill above the top of the sight glass

Gillard Cutting Technology
Alexandra Way
Ashchurch Business Centre
Tewkesbury,
Glos. GL20 8NB
England.
Tel: 01684 290243
E-mail: sales@gillard.co.uk

This drawing is the property of Gillard Cutting Technology & must not be copied or shown to third parties without prior written consent.

DESCRIPTION

Atomiser spray blade lubrication system

SCALE

SHEET No

Unless otherwise specified: 0.1mm
Dimensions without tolerances per ISO 2768 - m.K
All Coaxial features concentric within 0.15mmA

DRAWING No

REV