

Display:	Error:
"-----"	Display value unvalid <ul style="list-style-type: none"> - during initialization - while waiting for response - when display value range exceeded
E 001:	CAN Busoff: serious bus disturbance, CAN communication switched off (Reset only by power up)
E 002:	CAN warning (CAN error counter has exceeded warning limit): <ul style="list-style-type: none"> - unit is the only working device on the bus and gets no acknowledge or - light bus disturbance (non-fatal error, communication is beeing continued)
E 003:	No write response to preset value
E 004:	No write response to "Store EEPROM"
E 005: E 006: E 007:	Error response to preset value or "Store EEPROM": <ul style="list-style-type: none"> - wrong code - wrong Subcode - no access
E 008:	No read response to display value request
E 009: E 010: E 011:	Error response to display value request: <ul style="list-style-type: none"> - wrong code - wrong subcode - no access
E 012:	No read response during initialization
E 013: E 014: E 015:	Error response during initialisation: <ul style="list-style-type: none"> - wrong code - wrong subcode - no access
E 016:	Initialization error