



HENGSTLER 732 SETTINGS LENGTH COUNTER

Press E1 to enter length.

E6 on power up to set to Fn 0 (counter function).

E5 on power up to enter into program.

E3 to set pre-scale.

Press 6 & 4 together to reset.

No.	Function:	Setting:
F0	Default setting	0
F1	Count mode	0
F3	Decimal point	0
F4	Reset operation	1
F6	O/P 1 time	0.10
F7	O/P 2 time	0
F10	I/P (PNP=1 & NPN=0)	0
F11	Count speed	1
F12	Static/dynamic reset	0
F14	O/P signal memory	0
F20	Front panel reset	0
F21	Preset 1 access	0
F23	Pre-scale access	0
F29	Lockout mode	0