







INSTRUCTIONS


SRC 1301 SRC 1000/2000

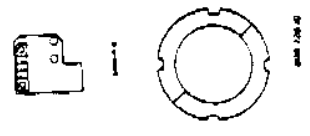


080R9024

080R9024

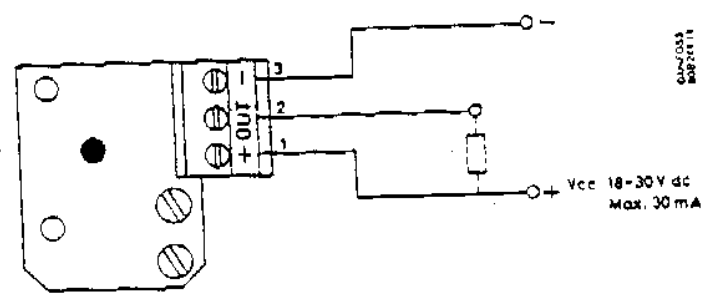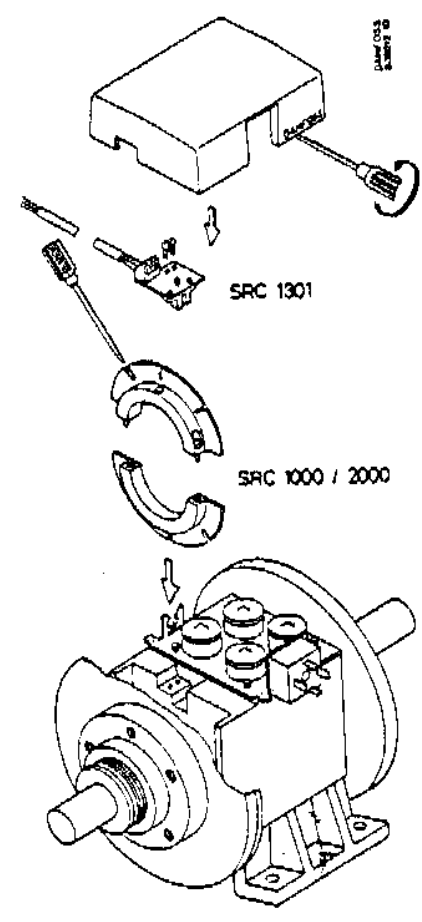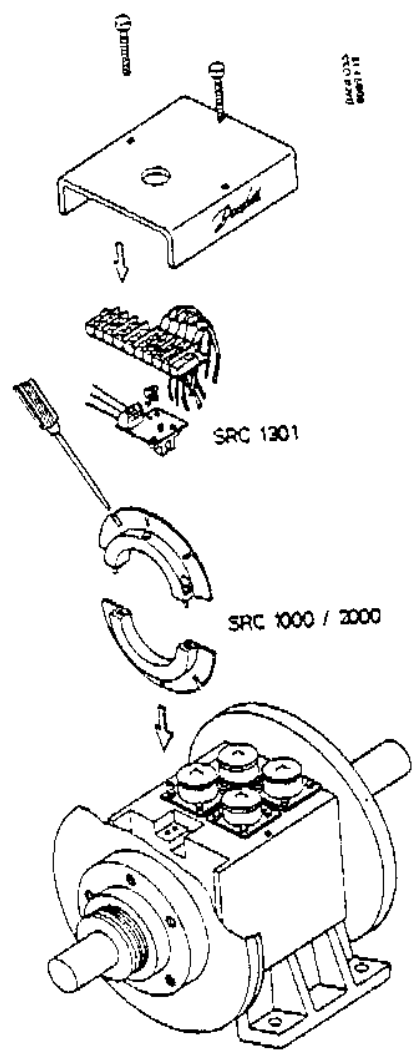

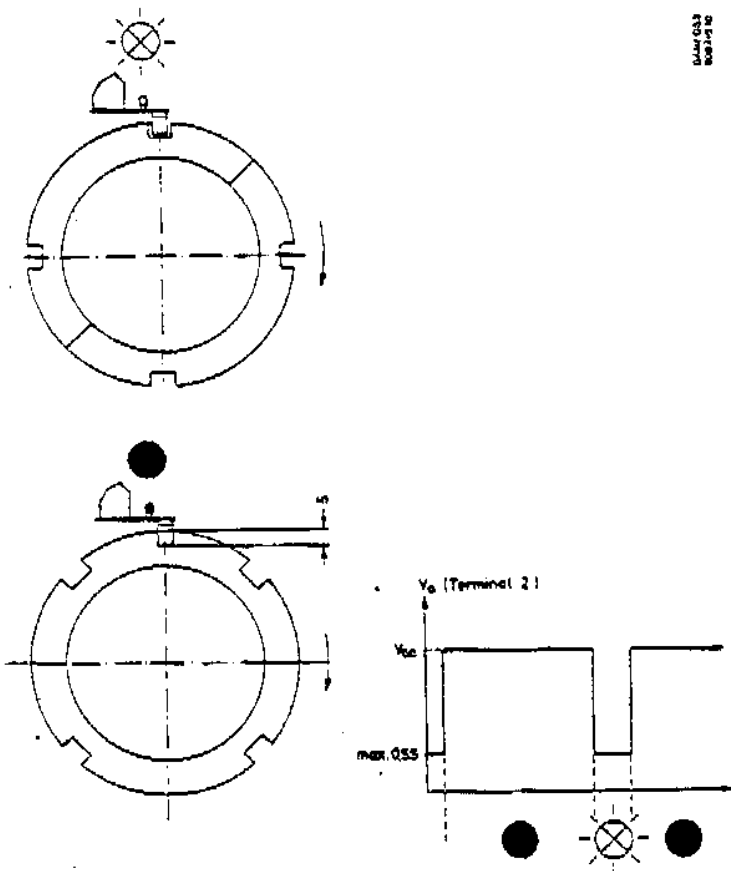

DANFOSS
081 991 7171

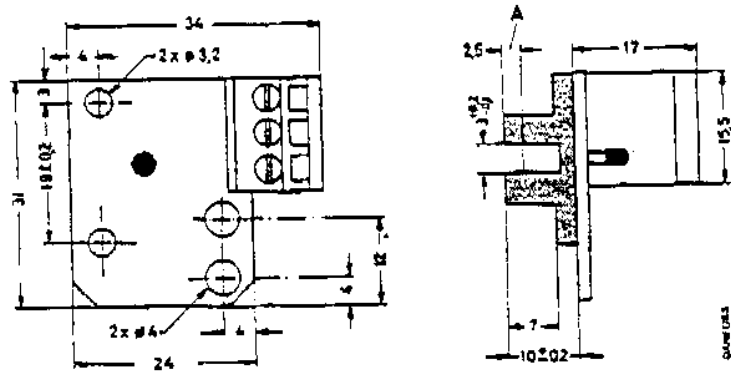

A = Sensor center

DANFOSS
081 991 7171